

# HAMER USA

www.hamerfanclub.com

**NECK & MID PU**

Ground = BLK

**BRIDGE PU**

Green/Bare = GROUND

Red/White = TIE


Black = HOT

**NECK PU**

White = HOT

**MID PU**

White = HOT

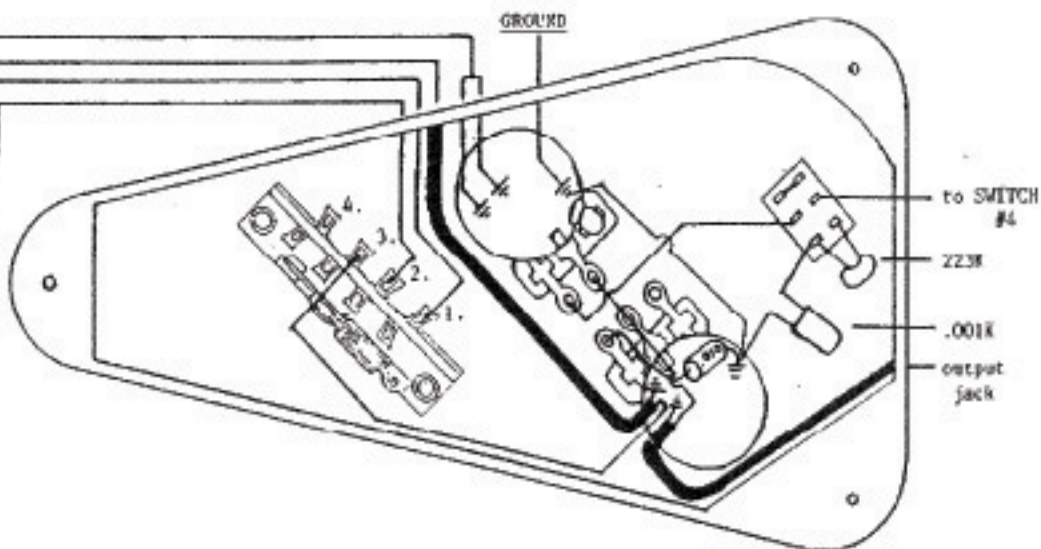

**MODEL:**

## CENTAURA

GCTS  
 \*\* GCTS - 2NB  
 GCTM  
 \*\* GCTM - 2NB

**Special Instructions:**

\*\* For models with 2 HB PU's, 5-way blade switch is replaced with a 3-way. Everything else remains the same. For 3-way blade wiring instructions, see CALIFORNIAN model wiring diagram.

**DATE:**

APRIL 21, 1991

**DRAWN BY:**

K. THIEL

Photo 1-16

**Description:**

1 Vol. / 1 Tone / 5-way Blade / 'Thick' switch / CA jack